


Держатели вала, серия SH

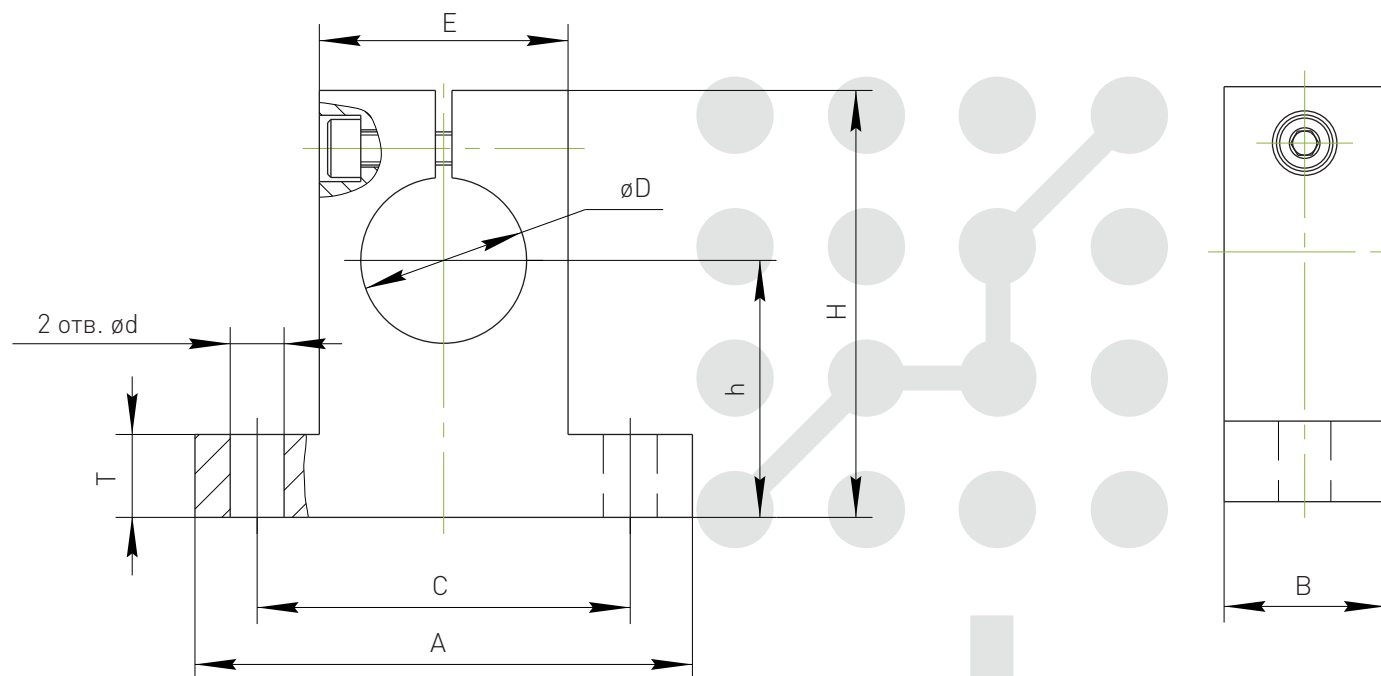


Единицы измерения: мм

Обозначение	øD	ød	A*	B*	C*	E	H	h±0.02	T	Масса, кг
SH-8	8	5.5	42	14	32	18	32.8	20	6	0.024
SH-10	10	5.5	42	14	32	18	32.8	20	6	0.024
SH-12	12	5.5	42	14	32	20	37.5	23	6	0.03
SH-16	16	5.5	48	16	38	25	44	27	8	0.04
SH-20	20	6.6	60	20	45	30	51	31	10	0.07
SH-25	25	6.6	70	24	56	38	60	35	12	0.13
SH-30	30	9	84	28	64	44	70	42	12	0.18
SH-35	35	11	98	32	74	50	82	50	15	0.27
SH-40	40	11	114	36	90	60	96	60	15	0.42
SH-50	50	14	126	40	100	74	120	70	18	0.75
SH-60	60	14	148	45	120	90	136	80	18	1.1

* - справочные размеры

Держатели вала, серия SHF

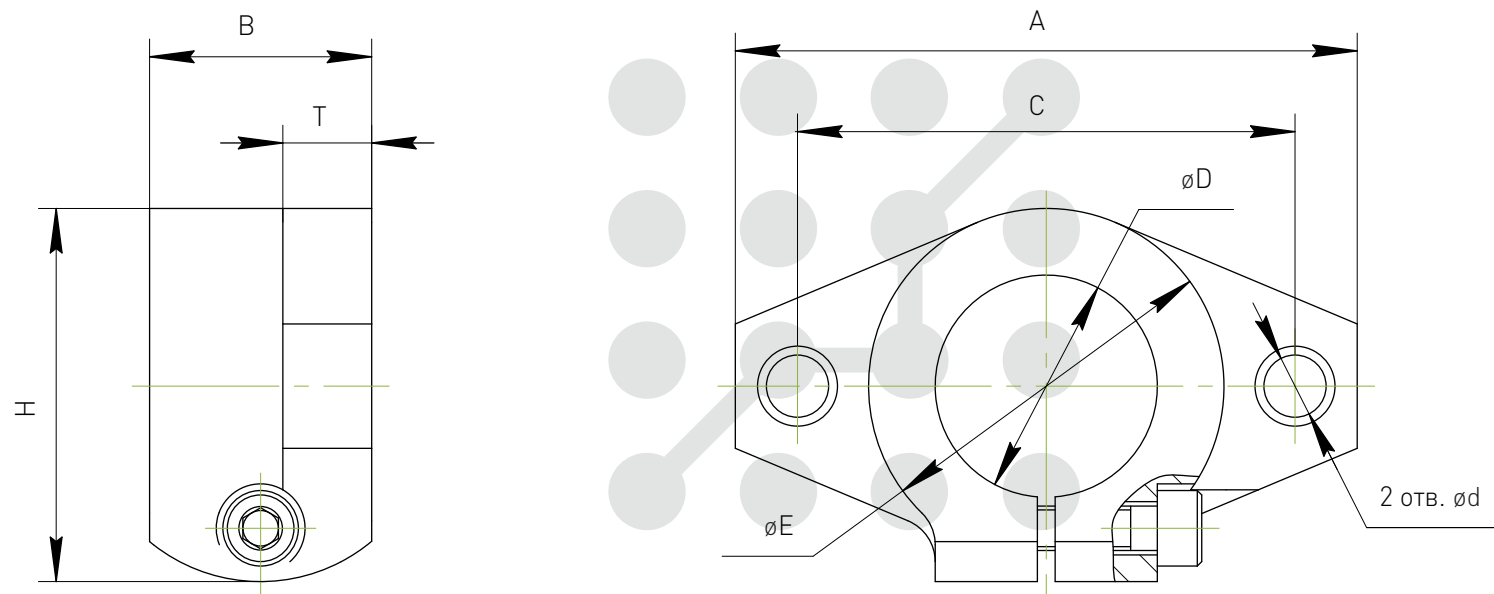

Единицы измерения: мм

Обозначение	øD	ød	A*	B*	C*	øE	H	h±0.02	T	Масса, кг
SHF-8	8	5.5	43	10	32	20	24	24	-	0.013
SHF-10	10	5.5	43	10	32	20	24	24	-	0.013
SHF-12	12	5.5	47	13	36	25	28	28	6	0.02
SHF-16	16	5.5	50	16	40	28	31	31	8	0.027
SHF-20	20	7	60	20	48	34	37	37	8	0.04
SHF-25	25	7	70	25	56	40	42	42	10	0.06
SHF-30	30	9	80	30	64	46	50	50	12	0.11
SHF-35	35	12	92	35	72	50	58	58	14	0.38
SHF-40	40	12	102	40	80	56	67	67	14	0.51
SHF-50	50	14	122	50	96	70	83	83	19	0.89
SHF-60	60	14	140	60	112	82	95	95	23	1.5

* - справочные размеры